


Press-in threaded inserts without head, for thermoplastics and thermosets

BN 1054

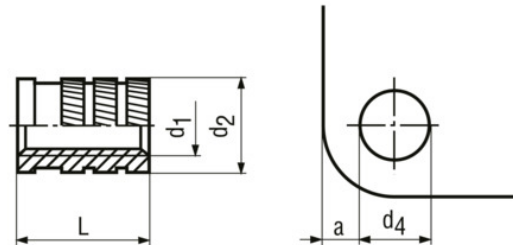

Headform Unheaded


Material Brass

Base coat plain

Assembly notice

1. Place shoulder of insert into pre-drilled hole.
2. Press in the insert by using a setting punch with pilot.
3. Fasten the workpiece with screw.

Illustration assembly

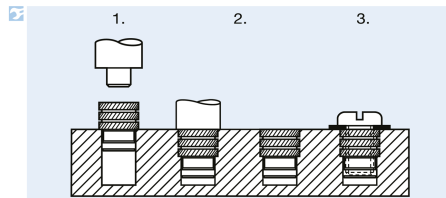

Article no.	Thread size (d1)	d2	L	d4 0/+0,1	a
1386727	M2	3,35	4	3,1	1,6
1386735	M2,5	4,2	5,3	3,8	2
1386743	M3	4,2	5,3	3,8	2
1386778	M4	5,8	7,4	5,4	2,5
1386786	M5	6,6	8,3	6,2	2,5
1386794	M6	8,2	9,2	7,8	2,8
1429361	M8	9,7	9,2	9,3	3,8